How to setup a hairpin to certain local server

I have a web server needs connection from external/internal location, but just opening a port, by NAT Port Forwarding, may not good enough as far as I experienced in MikroTik router - you cannot connect to your server by domain name. Following configuration enables you to connect to your local server by domain name like you do on external network.

RouterOS v6.45.7 (stable)
OK Cancel Apply Remove Reset Counters
not invalid
Enabled 🕑
Chain dstnat 🔻
Src. Address 🔻
Dst. Address 192.168.88.0/24
Protocol 🔺 🗌 6 (tcp) 🔻
Src. Port 🔻
Dst. Port 🔺 🗌 80
Any. Port 🔻
In. Interface 🔻

Note that you should check like above

•
•
▼ local ▼ ▲
•
•
•
dst-nat 🔻
•
▲ 192.168.88.6
•
Service hairpin to .6

To enable above on your MikroTik router, you should drag and drop as #1 item on your NAT list like below:

RouterOS v6.45.7 (stable)							
Filter Rules	NAT	Mangle Raw Se	ervice Ports	Connections	Address Lists		
Add New Reset All Counters							
	#	Action	Chain	Src. Address	Dst. Address		
;;; Service hairpin to .6							
- D	0		dstnat		!192.168.1		
;;; defconf: masquer							
- D	1	📲 masquerade	srcnat				
;;; masq. vpn traffic							

OK Cancel Apply	Remove Reset Counters
not invalid	
Enabled	
Chain	dstnat 🗸
Src. Address	•
Dst. Address	•
Protocol	▲ [6 (tcp) ✓
Src. Port	•
Dst. Port	▲ [80
Any. Port	-
In. Interface	▲ 🗌 ether1-gateway ❤

To allow internal connection to your server directly, you should add NAT rule by IP Firewall NAT Add New

Action	dst-nat 🗸
Log	
Log Prefix	•
To Addresses	▲ 192.168.89.6
To Ports	▲ 80